

CLEANING YOUR DEVICE

U200/U250/U300/U350

CLEANING: U200/U250



CLEANING: U300/U350





CLEANING: U700




RESET CLEANING-ICON ON YOUR DEVICE U350/U700

U350

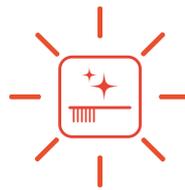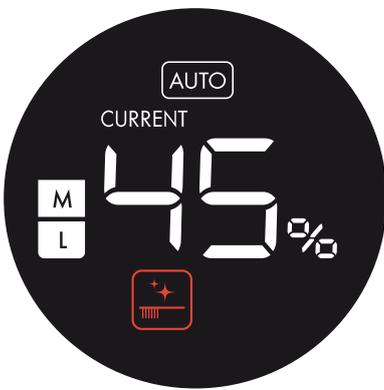

1

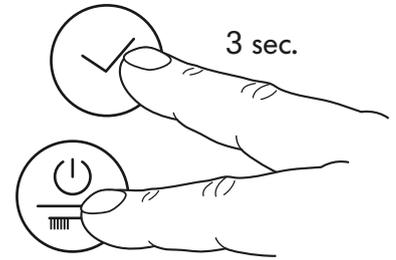


2

U700



1

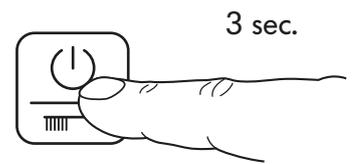

2